

## Hardware Interface

Set ZS8-PAS30H as example, it has interface of Alarm in, PoE and DC Power. The IP Speaker can be powered by PoE or DC 12V/24V, which can not be used the same time.



## Configuration

### Option 1: IPTool Setting

- (1) Contact your seller for IPTool software.
- (2) Install IPTool, scan Local area network devices.
- (3) Start your setting.

No.	UID	Name	MAC	IP address	Netmask	Gateway	SIP Settings	RTP Settings	Version	Audio	System
1	5023428330897A1C	CS20	a2:c0:a4:26:a0:ce	192.168.5.192	255.255.255.0	192.168.5.1		239.255.0.0:5008	CS20-V2.8.1N	12.7	admin

Current Device CS20-5023428330897A1C

SIP Account 1

User Name:

Password:

Display Name:

Server Host:

Server Port:

SIP Account 2

User Name:

Password:

Display Name:

Server Host:

Server Port:

Set Set All

### Option 2: Web Setting

- (1) Change the IP of computer to 192.168.5.X network segment.
- (2) Open a browser and type in <http://192.168.5.200>
- (3) Enter the user name and password in Login page.  
Default user: admin      password: tm1234
- (4) Start your setting.

Status

Serial Number E4607CD01B172434

Firmware Version CS20-V2.6.0

Up Time 00:02:18

SIP1 Status REG SUCCESS

SIP2 Status NONE

Network

MAC Address A2:C0:A4:13:09:FC

IP Address 192.168.5.186

Subnet Mask 255.255.255.0

Gateway 192.168.5.1

Primary DNS 218.85.152.99

Secondary DNS 218.85.157.99

Refresh